

Design		Item-Nr.	Unit	Carton
--------	--	----------	------	--------



One-Way switch single-pole	grey	NDC77011	10	100
One-Way switch double-pole	grey	NDC77021	10	100
Two-Way switch (toggle)	grey	NDC77101	10	100
Intermediate switch (cross)	grey	NDC77151	10	100
Two-Way switch (toggle)	pure white	NDC84101	10	100
Intermediate switch (cross)	pure white	NDC84151	10	100



Multi-circuit switch (double switch)				
grey		NDC77051	10	100
pure white		NDC84051	10	100



Control switch with light signal

One-Way switch	grey	NDC77191	10	100
Two-Way switch (toggle)	grey	NDC77221	10	100
Two-Way switch (toggle)	pure white	NDC 84221	10	100



Heater emergency switch With light signal and symbol

One-Way switch	grey	NDC77211	10	100
Two-Way switch (toggle)	grey	NDC77201	10	100
Two-Way switch (toggle)	pure white	NDC 84201	10	100



Push button without light signal	grey	NDC 77251	10	100
without light signal	pure white	NDC 84251	10	100
Push button with light signal	grey	NDC 77261	10	100
with light signal	pure white	NDC 84261	10	100